

INSTALLATION INSTRUCTIONS

©2000

Universal Weatherproofing Kit for Coaxial Cable and Antenna Interfaces

1082 IB D

PRODUCT DESCRIPTION


The Universal Weatherproofing Kit includes mastic and electrical tapes that are applied to provide a multi-layer, long-term environmental seal over multiple connections.

NOTICE

Installation of this product should only be performed by trained, qualified and experienced personnel. Installation instructions for this product should be read thoroughly before installation is performed. The manufacturer and supplier of this product disclaims any liability or responsibility for the results of improper or unsafe installation practice.

MATERIAL LIST

- (5) 3-3/4" x 24" butyl mastic
- (2) 3/4" x 44' electrical tape
- (1) 2" x 20' electrical tape

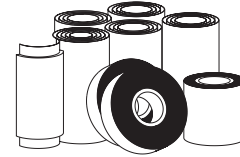


REQUIRED TOOLS


- Knife

TYPICAL APPLICATIONS


Apply one layer of 2" x 20' electrical tape over lapping each row approximately 1/4". Tape layers should extend approximately 1" past each end of connection and each layer should be tightly wrapped to eliminate any void or air pockets.

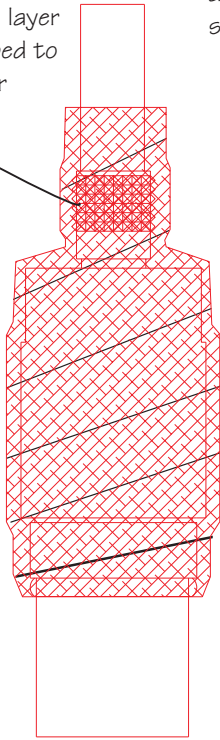


Apply one layer of butyl mastic overlapping each row approximately 1/2". Mastic layer should overlap first tape layer at a minimum of 1/2" on each side of connection.

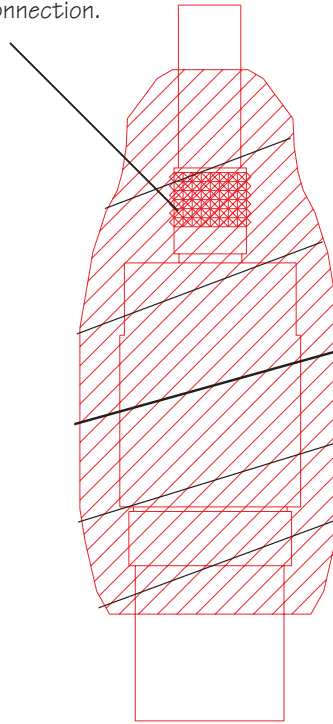


Apply three final layers of 3/4" x 44" electrical tape overlapping each row approximately 1/4". Tape layers should extend approximately 1" past each end of connection and each layer should be tightly wrapped to eliminate any void or air pockets.

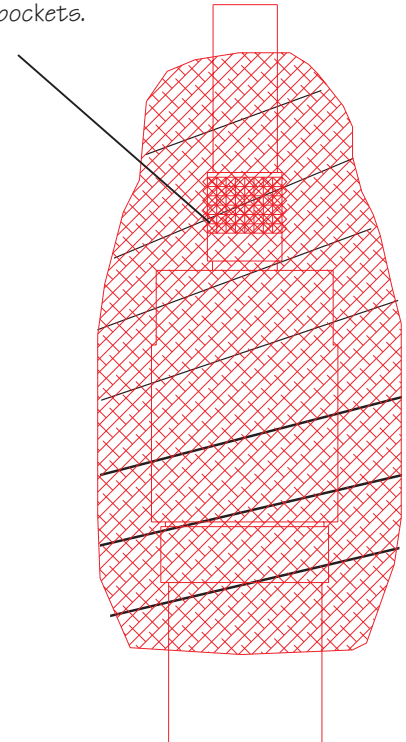


ADDITIONAL MOUNTING ACCESSORIES

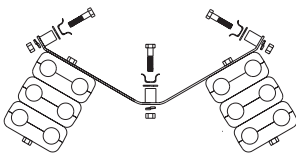

Wood Pole & Universal
Mounting Brackets

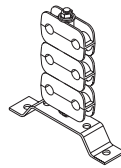

Mini Coax
Support Blocks

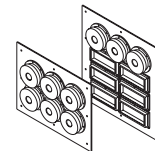

Entry Port
Systems